 


Read all instructions before starting installation

PACK CONTENTS

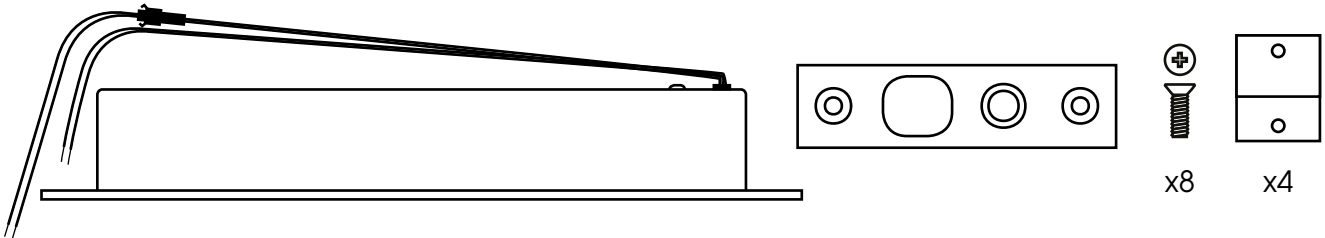

GENERAL INSTALLATION INSTRUCTIONS

1 Ensure that

You have the following:

- Strike plate
- Electric bolt

2 All rebate strips and/or frame stops should be fitted before starting

3 A 2 amp Power Supply should be provided to ensure there is a Full 1 amp for the bolt. This should allow for a basic Access System and a back up battery to be connected to the same source.

 
WARNING: THE CONNECTION OF AN INCORRECT VOLTAGE MAY RESULT IN DAMAGE NOT COVERED BY THE PRODUCT WARRANTY.

4 The selection of appropriate power supply cable is very important to ensure lock receives sufficient power to operate.


5 Connect flying leads (+) Red (-) Black. Note - other leads for connection of LED via plug in lead ***NOT FOR POWER INPUT***

6 This product has been designed for use in weather protected areas and under normal circumstances does not require any maintenance. **DO NOT OIL OR LUBRICATE.**


7 This product must be used in conjunction with a quality floor spring or door closer to ensure positive realignment on closing.

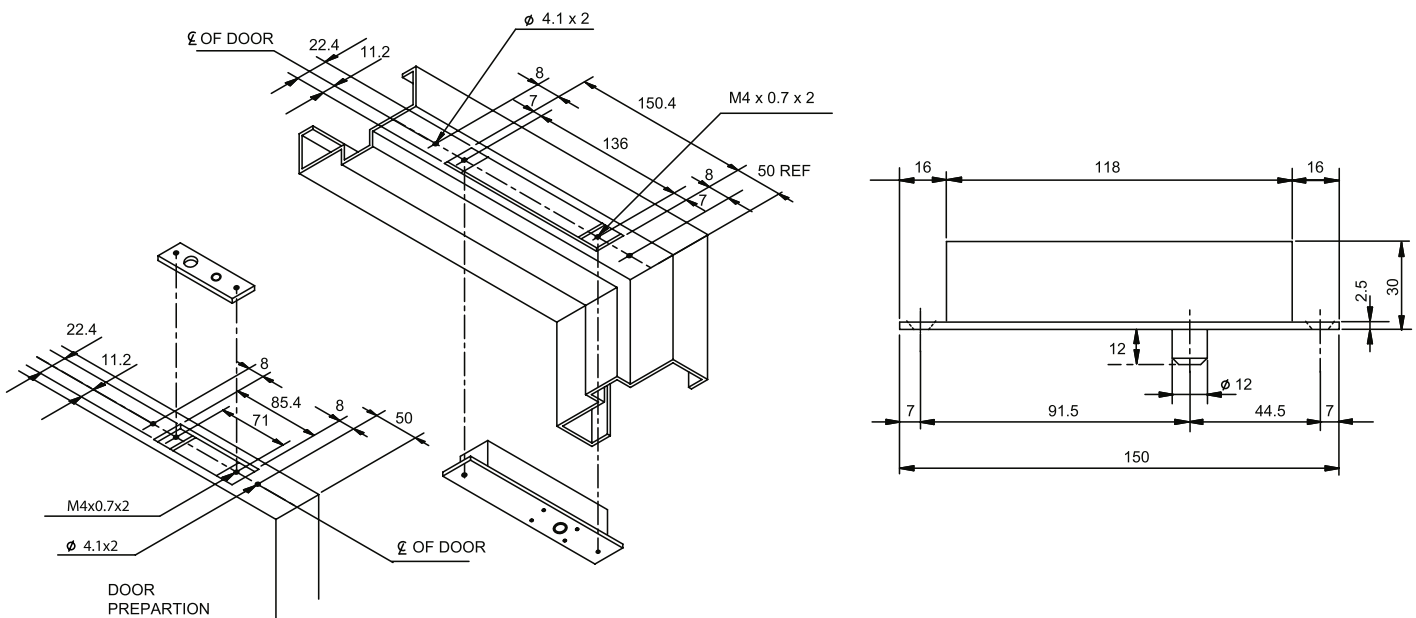

 
Read all instructions before starting installation

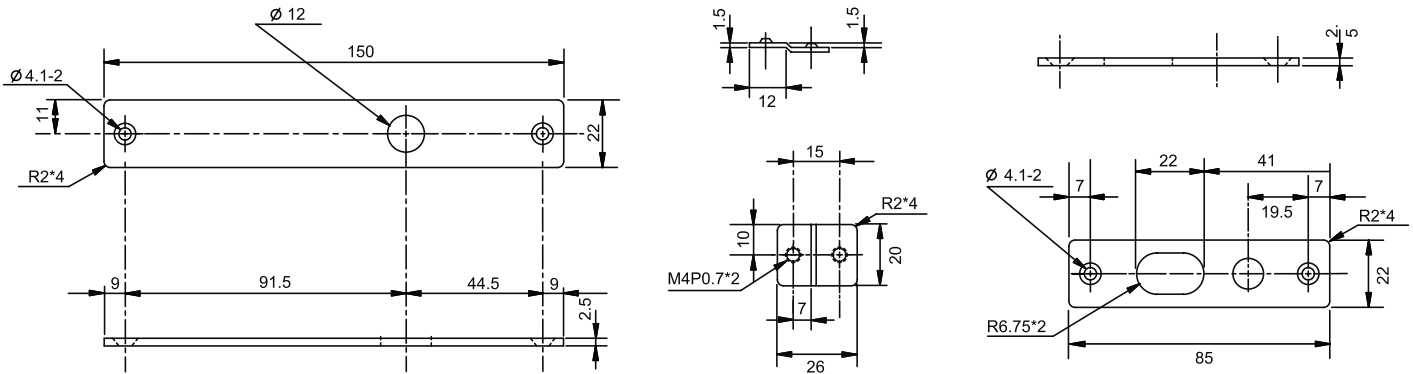

DOOR STATUS SENSOR:

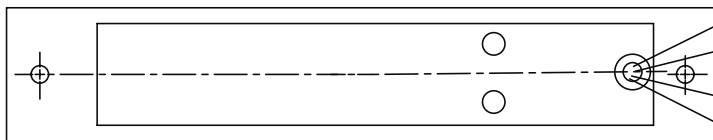 

 WHITE NORMALLY OPEN
 WHITE COM RATED:0.5A
 RED +
 BLACK - POWER DC12V IN
 VOLTAGE:12VDC
 CURRENT:START 0.7A
 STANDARD 100mA

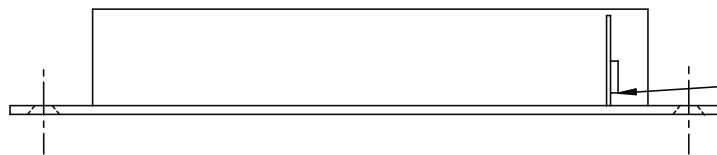

AUTOLOCK TIME DELAY SETTING



SETTING SWITCH

WARRANTY

This product is guaranteed for a period of 3 years against defects in manufacture, workmanship or materials provided that all electrical and mechanical installation requirements are adhered to as per this instruction sheet. All third party and consequential claims are expressly excluded from this warranty.